

MAVIC PRO

DISCLAIMER AND SAFETY GUIDELINES

V1.0 2017.05



Contents

Safety At a Glance	4
NOTICE	6
Glossary	6
Pre-flight Checklist	6
Disclaimer and Warning	7
Before You Begin	10
Individual Parts	10
Regarding Genuine and Functional Parts	10
Remote Controller	11
Camera	11
Gimbal	12
Compass	12
Propulsion Systems	12
App	13
Firmware	14
Internal Storage Device	15
Product Care	15
Storage and Transportation	15
Maintenance and Upkeep	16
Flight Condition Requirements	16
Weather Conditions and Surrounding Environment	16
Interference with Flight Controller, Communications, and	16
Positioning Systems	16
Operating the Aircraft Responsibly	17
Flight Modes, Functions and Warnings	18
Flight Modes	18
Failsafe and Return-to-Home	18
Low Battery	19
Vision Positioning System	19
TapFly	20
ActiveTrack	20
Compliance with Regulations & No Fly Zones	21
Regulations	21
No Fly Zones	22
Compliance Information	24

Safety At a Glance

1. Environmental Considerations

- Always fly at locations that are clear of building and other obstacles.
- DO NOT fly above or near large crowds.
- Avoid flying at altitudes above 400 feet (120 m).
- Be very careful when flying 16,404 feet (5,000 m) or more above sea level.
- Fly in moderate weather conditions with temperatures between 32° to 104° F (0° to 40° C).

2. Pre-flight Checklist

- Ensure the remote controller and aircraft batteries are fully charged.
- Ensure the propellers are in good condition and securely tightened.
- Ensure there is nothing obstructing the motors.
- Only calibrate the compass when the DJI GO™ 4 app or the status indicator prompt you to do so.
- Check that the camera lens is clean and free of stains.

3. Operation


- Stay away from the rotating propellers and motors.
- Maintain line of sight of your aircraft at all times.
- DO NOT answer incoming calls during flight.
- DO NOT fly under the influence of alcohols or drugs.
- During the Return-to-Home procedure, you can adjust the altitude to avoid obstacles.
- DO NOT fly closely above reflective surfaces such as water or snow, as these terrain may affect the performance of the Vision Positioning System.
- In the instance of a Low Battery Warning, land the aircraft at a safe location.
- After landing, first turn off the Intelligent Flight Battery, then turn off the remote controller.
- When using TapFly™ and ActiveTrack™ features, be prepared to take control of the aircraft or press the "STOP" button on the screen or the Intelligent Flight Pause button at all times, in case of an emergency.

4. Maintenance and Upkeep

- DO NOT use aged, chipped or broken propellers.
- Recommended storage temperature: between 71° and 82° F (22° and 28° C).
- Refer to the Mavic Pro Intelligent Flight Battery Safety Guidelines for more information about the safe use of the battery.

5. Observe Local Laws and Regulations


- DO NOT fly in the No Fly Zones. You can find a complete list of these areas at <http://www.dji.com/flysafe>
- The DJI No Fly Zone is not a replacement for local government regulations or good judgment.
- Avoid flying in areas where rescue teams are actively using the airspace.

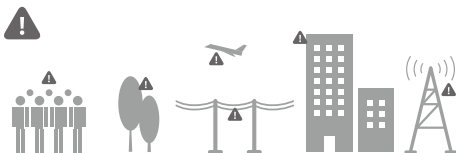

Avoid flying over or near obstacles, crowds, high voltage power lines, trees or bodies of water. DO NOT fly near strong electromagnetic sources such as power lines and base stations as it may affect the onboard compass.



DO NOT use the aircraft in adverse weather conditions such as rain, snow, fog and wind speeds exceeding 10 m/s or 22 mph.



Stay away from the rotating propellers and motors.



No Fly Zone

Learn more at:
<http://www.dji.com/flysafe>

NOTICE

All instructions and other collateral documents are subject to change at the sole discretion of SZ DJI TECHNOLOGY CO., LTD. For up-to-date product information, visit <http://www.dji.com> and click on the Mavic Pro product page.

Glossary

The following terms are used throughout the product literature to indicate various levels of potential harm when operating this product:

NOTICE NOTICE: Procedures, which if not properly followed, create a possibility of physical property damage AND a little or no possibility of injury.

CAUTION CAUTION: Procedures, which if not properly followed, create the probability of physical property damage AND a possibility of serious injury.

WARNING WARNING: Procedures, which if not properly followed, create the probability of property damage, collateral damage, and serious injury OR create a high probability of superficial injury.



WARNING

Read the ENTIRE user manual to become familiar with the features of this product

before operating. Failure to operate the product correctly can result in damage to the product or personal property and cause serious injury. This is a sophisticated product. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. DO NOT use with incompatible components or alter this product in any way outside of the documents provided by SZ DJI TECHNOLOGY CO., LTD. These Safety Guidelines contain instructions for safety, operation and maintenance. It is essential to read and follow all of the instructions and warnings in the user manual, prior to assembly, setup or use, in order to operate the product correctly and avoid damage or serious injury.

Age Recommendation: Not for children under the age of 18. This is not a toy.

Pre-flight Checklist

1. Ensure that you are using only genuine parts and that all parts are in mint condition.

2. Ensure the remote controller, Intelligent Flight Battery, and mobile device are fully charged.
3. Ensure that there is no foreign object stuck to the camera lens, the Micro SD card has been inserted into the camera, and the gimbal can rotate freely before powering it on.
4. Ensure the propellers are securely mounted onto the motors, and the motors can start and function normally.
5. Follow the on-screen instructions to calibrate the compass.
6. Ensure the app and aircraft's firmware have been upgraded to the latest version.
7. Ensure that your flight area is outside the No Fly Zones and flight conditions are suitable for flying the aircraft.
8. Be sure that you are NOT flying under the influence of alcohol, drugs or any substance that may impair your cognitive abilities.
9. Be familiar with the selected flight mode and understand all safety functions and warnings.
10. Be sure to observe all local regulations, obtain appropriate authorizations, and understand the risks. **REMEMBER:** It is solely your responsibility to comply with all flight regulations.

Disclaimer and Warning

This product is NOT a toy and is not suitable for children under the age of 18. Adults should keep the Mavic Pro out of the reach of children and exercise caution when operating this aircraft in the presence of children.

This product is a flying camera that offers easy flight when in good working order as set forth below. Visit <http://www.dji.com> for the most current instructions and warnings and <http://knowbeforeyoufly.org/> for more information about flight safety and compliance.

The information in this document affects your safety and your legal rights and responsibilities. Read this entire document carefully to ensure proper configuration before use. Failure to read and follow the instructions and warnings in this document may result in product loss, serious injury to you, or damage to your aircraft.

By using this product, you hereby signify that you have read this disclaimer carefully and that you understand and agree to abide by the terms and conditions herein. You agree that you are solely responsible for your own conduct while using this product, and for any consequences thereof. You agree to use this product only for purposes that are proper and in accordance with all applicable laws, rules, and regulations, including

international and domestic airspace regulations, and all terms, precautions, practices, policies and guidelines DJI™ has made and may make available.

DJI accepts no liability for damage, injury or any legal responsibility incurred directly or indirectly from the use of this product. The user shall observe safe and lawful practices including, but not limited to, those set forth in these Safety Guidelines.

Data Storage and Usage

When you use our mobile app or our products or other software, data regarding the use and operation of the product, such as flight telemetry data (e.g., speed, altitude, battery life, and information about the gimbal and camera) and operations records, may be automatically or manually uploaded to and maintained on a DJI-designated server. The internal storage device incorporated into the product stores various types of data, including flight telemetry data. You may also provide flight telemetry data and other data to us when you manually transmit that information from the internal storage device to us.

When you use the aircraft, flight telemetry data and operations records, including still and motion imagery data from one or more sensors in the aircraft, may be automatically generated and stored on the internal storage device. You may also provide flight telemetry data, operations records, and other data to us when you manually transmit that information from the internal storage device, or when you provide the internal storage device, to us.

The information that is automatically uploaded or manually uploaded to us does not include personal data (i.e., your name, address, email, or other information that specifically identifies you), but personal data, such as your user name, may become associated with, used to identify, or tagged to such uploaded information when we store it. We separately describe how we use your user name and other personal data on our privacy policy at <http://www.dji.com/policy>. By using the product, the mobile app or other software we distribute, or by manually providing data to us, you consent to the following:

- Our storage of any flight telemetry data and other data uploaded or provided to us, including in combination with your user name;
- Our use of any such data uploaded or provided (including your user name) in connection providing support and services to you and to improve our products;

- Our disclosure of such data uploaded or provided (including your user name) to our agents and/or contractors who may use it on our behalf or in connection with their relationship with us; and
- Our disclosure of such uploaded or provided data (including your user name) as required by law, in a matter of public safety or policy, as needed in connection with the transfer of our business assets, or if we believe in good faith that sharing the data is necessary to protect our rights or property.

Before You Begin

The following documents have been produced to help you safely operate and make full use of your Mavic Pro:

In the Box

Disclaimer and Safety Guidelines

Intelligent Flight Battery Safety Guidelines

Quick Start Guide

User Manual

Check all of the included parts listed in the *In the Box* document and read the *Disclaimer and Safety Guidelines* before flight. Then prepare for your first flight by using the *Quick Start Guide* and watching all of the tutorial videos on DJI's official website (<http://www.dji.com>). If you have questions, refer to the *User Manual* in the app or on DJI's official website for more comprehensive information. Make sure you fully understand the functionality of each individual part, the flight condition requirements, the key contingency warning functions/systems, and all government regulations before each flight. If you have any questions or problems during the assembly, maintenance or use of this product, please contact DJI or a DJI authorized dealer.

Individual Parts

Regarding Genuine and Functional Parts



WARNING

To avoid component malfunction, serious injury, and property damage, observe the following rules:

1. Use only genuine DJI parts or parts certified by DJI. Unauthorized parts or parts from non-DJI certified manufacturers may cause system malfunctions and compromise safety.
2. Ensure there are no foreign objects (such as water, oil, soil, sand, etc.) inside of the aircraft or its components.
3. Ensure the aircraft and its components – including but not limited to the remote controller, camera, gimbal, compass, propulsion system, and battery – are all in good working order, damage-free, and functioning well. Refer to the remaining sections in this document for more details on how to ensure the functionality of these components.

Remote Controller

NOTICE

1. Ensure the remote controller is fully charged before each flight.
2. If the remote controller is powered on and has NOT been used for 5 minutes, it will sound an alert. After 10 minutes it will automatically power off. Move the sticks or perform some other action to cancel the alert.
3. Adjust the clamp of the mobile device holder to allow a firm grip on your mobile device.
4. Ensure the mobile device holder is firmly in place and does not slip.
5. Ensure the antennas of the remote controller are unfolded and adjusted to the proper position to achieve optimal transmission quality.
6. Repair or replace the remote controller if damaged. A damaged remote controller antenna will greatly decrease performance.
7. Linking is required if you wish to replace your remote controller or receiver or add a new remote controller. Refer to the User Manual for details.
8. Fully charge the battery at least once every three months to maintain battery health.

Camera

CAUTION

To avoid possible serious injury and property damage, observe the following rule:

1. DO NOT block any ventilation holes on the camera as the heat generated may hurt you and damage the device.

NOTICE

1. Check camera settings before use to make sure you can adjust them to fit your needs.
2. Test the camera by shooting a few test images and check that it is operating correctly before shooting important pictures or videos.
3. DO NOT remove the Micro SD card from the camera when it is powered on.
4. Photos or videos cannot be transmitted or copied from the camera if the Intelligent Flight Battery is powered off.
5. Be sure to power off the Intelligent Flight Battery correctly, otherwise your camera parameters will NOT be saved and any recorded videos may be damaged. NOTE: Regardless of the reason, DJI will not be responsible for any failure of an image or video to be recorded or having been recorded in a way that is not machine readable.

Gimbal

NOTICE

1. Precision elements in the gimbal may be damaged in a collision or impact, which may cause the gimbal to function abnormally.
2. DO NOT apply external force to the gimbal after the gimbal is powered on.
3. DO NOT add any payloads to the gimbal, as this may cause the gimbal to function abnormally or even lead to motor damage.
4. Remove the gimbal clamp before powering on the gimbal. Re-install the gimbal clamp to secure the gimbal's position if you are going to store the aircraft for an extended period.

Compass

CAUTION

To avoid possible serious injury and property damage, observe the following rule:

1. Land immediately when severe drifting occurs in flight, i.e., the aircraft does NOT fly in straight lines.

NOTICE

Only calibrate the compass when the DJI GO 4 app or the status indicator prompt you to do so. Observe the following rules when calibrating your compass:

1. DO NOT calibrate your compass where there is a chance of strong magnetic interference, such as magnetite, parking structures, and steel reinforcements underground.
2. DO NOT carry ferromagnetic materials with you during calibration such as cellular phones.
3. The DJI GO 4 app will prompt you to resolve the compass issue if the compass is affected by strong interference after calibration is complete. Follow the prompted instructions to resolve the compass issue.

Propulsion Systems

WARNING

To avoid serious injury to yourself or others, which may be caused by the rotating propellers and motors, observe the following rules:

Propellers

1. DO NOT use aged, chipped, or broken propellers.

2. Always power off the aircraft before touching the propellers.
3. Be aware of the sharp edges of the propellers when mounting or removing the propellers. Wear gloves or take other protective measures when touching the propellers.
4. Whenever necessary, use tools (e.g., wrench, screwdriver, pliers, etc.) to remove or install the propellers.
5. Ensure the propellers are securely mounted to prevent them from falling off the motors.
6. DO NOT turn on the motors when propellers are mounted and there are other people or animals in the immediate vicinity.

Motors

1. Ensure the motors are securely mounted and rotating smoothly.
2. DO NOT attempt to modify the structure of the motors.
3. DO NOT touch or let your hands or body come in contact with the motors after flight as they may be hot.

CAUTION

To avoid possible serious injury and property damage, observe the following rules:

1. DO NOT block any of the ventilation holes on the motors.
2. DO NOT block any of the ventilation holes on the body of the aircraft.

NOTICE

Motors

1. Keep the motors free of dust.
2. If a motor is stuck and unable to rotate freely, execute the CSC (Combination Stick Command) to stop the motors immediately.

Electronic Speed Controllers

1. Ensure the ESCs sound a normal tune when powered on.

App

NOTICE

1. Be sure to fully charge your mobile device before launching the app.
2. If you are using a phone as your mobile display device, be sure to continue flying safely when the phone receives an incoming call. DO NOT accept phone calls during flight.
3. Read all prompted safety tips, warning messages, and disclaimers carefully. Be familiar with the related regulations in your area. You are solely responsible for being aware of all relevant regulations and flying in a way that is compliant.

- a. Read and understand the warning messages before using the Auto-take off and Auto-landing features.
 - b. Read and understand the warning message and disclaimer before setting the altitude beyond the default limit.
 - c. Read and understand the warning messages and disclaimer before switching between flight modes.
4. Land your aircraft immediately if there is an alert shown on the app.
 5. Examine and check all warning messages on the checklist displayed in the app prior to each flight.
 6. Use the in-app simulator to practice your flight skills if you have never operated the aircraft or if you do not have sufficient experience to be comfortable operating the aircraft.
 7. Beginner Mode is enabled by default when you launch the app for the first time. The aircraft's altitude and flight distance is restricted when flying in Beginner Mode. We recommend you fly in Beginner Mode to perfect your flight skills. Operate the actual aircraft only after you are confident that you have mastered adequate flight skills.
 8. Cache the map data of the area where you intend to fly the aircraft by connecting to the Internet before each flight.

Firmware

WARNING

To avoid serious injury to children and animals, observe the following rule:

- 1. Keep children and animals at a safe distance during any firmware upgrade, system calibration, and parameter setting procedures.**

NOTICE

1. For safety, always update the firmware to the latest version when an upgrade notification is shown in the app.
2. Firmware upgrade notifications will prompt you to proceed with an update immediately or to update the firmware within three days. If you choose to ignore the current firmware update, you are required to accept the prompted disclaimer. You further understand and agree that the data including but not limited to flight telemetry data and user selection records may be uploaded to and maintained on a DJI-designated server.
3. Be sure to download the firmware package file from the official DJI website. Verify the firmware package file's integrity before upgrading.
4. Be sure to update the remote controller's firmware to the latest version after you update the aircraft's firmware.
5. The remote controller may become unlinked from the aircraft after updating. Re-link the remote controller and aircraft.

6. Be sure to check all connections and remove the propellers from the motors before performing the firmware update.

Internal Storage Device

NOTICE

1. The aircraft contains an internal storage device that may store data and operations records (including still and motion imagery data from one or more sensors in the aircraft). Still and motion imagery data may be automatically generated from the one or more sensors when you operate the aircraft.
2. Due to the potentially automatic generation of imagery data by the aircraft during operation, DO NOT operate the aircraft in areas where people may reasonably expect privacy.

Product Care

Storage and Transportation

WARNING

To avoid serious injury to children and animals, observe the following rule:

1. **Small parts, such as cables and straps, are dangerous if swallowed. Keep all parts out of reach of children and animals.**

NOTICE

1. Store the Intelligent Flight Battery and remote controller in a cool, dry place away from direct sunlight to ensure the built-in LiPo battery does NOT overheat. Recommended storage temperature: between 71° and 82° F (22° and 28° C) for storage periods of more than three months. Never store in environments outside the temperature range of -68° to 113° F (-20° to 45° C).
2. DO NOT allow the camera to come into contact with, or become immersed in, water or other liquids. If it gets wet, wipe dry with a soft, absorbent cloth. Turning on an aircraft that has fallen into water may cause permanent component damage. DO NOT use substances containing alcohol, benzene, thinners or other flammable substances to clean or maintain the camera. DO NOT store the camera in humid or dusty areas.
3. DO NOT connect this product to any USB interface that is older than version 2.0. DO NOT connect this product to any "power USB" or similar devices.

Maintenance and Upkeep

NOTICE

1. Check every part of the aircraft after any crash or violent impact. If you have any problems or questions, please contact a DJI authorized dealer.
2. Regularly check the Battery Level Indicators to see the current battery level and overall battery life. When the battery life reaches 0%, it can no longer be used.

Flight Condition Requirements

Weather Conditions and Surrounding Environment

WARNING

The aircraft is designed to operate in good to moderate weather conditions. To avoid collision, serious injury and property damage, observe the following rules:

1. **DO NOT** use the aircraft in severe weather conditions. These include wind speeds exceeding 10 m/s, snow, rain, smog, heavy wind, hail, lightning, tornadoes or hurricanes.
2. Keep the aircraft at least 10 meters (30 feet) away from obstacles, people, animals, buildings, public infrastructure, trees, and bodies of water when in flight. Stay even further away from the above objects as your altitude increases.
3. Be **EXTRA** cautious when operating the aircraft indoors.

NOTICE

1. Aircraft and battery performance is subject to environmental factors such as air density and temperature.
 - a. Be very careful when flying 16,404 feet (5,000 meters) or more above sea level as battery and aircraft performance may be reduced.
2. **DO NOT** use the aircraft near accidents, fire, explosions, floods, tsunamis, avalanches, landslides, earthquakes, dust, or sandstorms.

Interference with Flight Controller, Communications, and Positioning Systems

NOTICE

1. Fly in open areas. Tall buildings or steel structures may affect the accuracy of the on-board compass and block the GPS signal.
2. Avoid interference between the remote controller and other wireless

equipment. Make sure to turn off the Wi-Fi on your mobile device.

3. DO NOT fly near areas with magnetic or radio interference. These include but are NOT limited to: high voltage lines, large scale power transmission stations or mobile base stations and broadcasting towers. Failing to do so may compromise the transmission quality of this product or cause remote controller and video transmission errors which may affect flight orientation and location accuracy. The aircraft may behave abnormally or go out of control in areas with too much interference.

Operating the Aircraft Responsibly

WARNING

To avoid serious injury and property damage, observe the following rules:

1. Make sure you are NOT drunk, taking drugs, under the influence of anesthesia, or suffering from dizziness, fatigue, nausea or any other conditions, whether physical or mental, that could impair your ability to operate the aircraft safely.
2. Upon landing, power off the aircraft first, then switch off the remote controller.
3. DO NOT drop, launch, fire or otherwise project any dangerous payloads on or at any buildings, persons or animals, or which could cause personal injury or property damage.

NOTICE

1. Make sure you have been sufficiently trained and are fully aware of any contingency plans before accidents happen.
2. Make sure you have a flight plan and never fly the aircraft recklessly.
3. Respect the privacy of others when using the camera. Make sure you comply with local privacy laws, regulations, and moral standards.
4. DO NOT use this product for any reason other than general personal use. DO NOT use it for any illegal or inappropriate purpose (such as spying, military operations, or unauthorized investigations).
5. DO NOT use this product to defame, abuse, harass, stalk, threaten or otherwise violate the legal rights (such as the right of privacy and publicity) of others.
6. DO NOT trespass into private property of others.

Flight Modes, Functions and Warnings

Flight Modes

WARNING

To avoid serious injury and property damage, observe the following rule:

1. **DO NOT switch from P-mode to S-mode unless you are sufficiently familiar with the aircraft's behavior for each flight mode, since disabling GPS may result in being unable to land the aircraft safely.**

NOTICE

P-mode or S-mode is preferred for most flight scenarios. When flying in Atti mode, take EXTRA precautions because some features are NOT available in A-mode.

1. P-mode (Positioning): P-mode works best when the GPS signal is strong. The aircraft utilizes the GPS and Obstacle Sensing System to automatically stabilize itself, navigate between obstacles or track a moving object. Advanced features such as TapFly and ActiveTrack are enabled in this mode.
2. S-mode (Sports): S-mode is identical to P-mode in terms of GPS settings, however, the Obstacle Sensing System is disabled in S-mode. In addition, handling gain values of the aircraft are adjusted in order to enhance the maneuverability of the aircraft.

The aircraft will automatically switch to Atti mode when GPS signal is weak and the lighting condition does not meet with the requirement of the Obstacle Sensing System. The aircraft will only be able to stabilize its attitude by using its in Atti mode and Intelligent Flight features are disabled.

Failsafe and Return-to-Home

NOTICE

1. The Return-to-Home feature will NOT work if the GPS signal is insufficient or if GPS is not active.
2. Press the RTH (Return-to-Home) Button on the remote controller to bring the aircraft back to the Home Point instead of turning off the remote controller.
3. Tall buildings may adversely affect the Failsafe function. Please adjust the aircraft location, altitude and speed while returning home to avoid obstacles.
4. Make sure to always fly the aircraft within the transmission range of the remote controller.

5. Only use the Failsafe and Return-to-Home functions in case of emergency, as they may be affected by the weather, the environment, or any nearby magnetic fields.
6. The aircraft cannot avoid obstacles during the Failsafe RTH when lighting condition is not ideal; therefore it is important to set an appropriate Failsafe altitude before each flight.
7. When flying indoors, the aircraft cannot perform precision hovering when flying above the surfaces that do not have a clear pattern. Refer to the "Vision Positioning System" section for complete indoor flying criteria.

Low Battery

NOTICE

1. When the Critical Battery Level Warning activates and the aircraft is descending automatically, you may push the throttle up to maintain the aircraft's altitude and navigate it to a more appropriate location for landing.
2. When battery warnings are triggered, promptly bring the aircraft back to the Home Point or land to avoid losing power during flight and causing damage to the aircraft, property, animals, and people.

Vision Positioning System

NOTICE

1. The Vision Positioning System cannot work properly over surfaces that do NOT have pattern variations. The effective altitude for the Vision Positioning System to function correctly is less than 13 meters above ground level (AGL).
2. The Vision Positioning System may NOT function properly when the aircraft is flying over water.
3. Keep your pets away from the aircraft when the Vision Positioning System is activated, as the sonar sensors emit a high frequency sound that is only audible to some pets.
4. Note that the Vision Positioning System may NOT function properly when the aircraft is flying too fast or too low.
5. Operate the aircraft cautiously when in any of the following situations:
 - a. Flying over monochrome surfaces (e.g., pure black, pure white, pure red, pure green).
 - b. Flying over highly reflective surfaces;
 - c. Flying at high speeds (over 10m/s at 2 meters or over 5m/s at 1 meter);
 - d. Flying over water or transparent surfaces;
 - e. Flying over moving surfaces or objects;
 - f. Flying in an area where the lighting changes frequently or drastically;

- g. Flying over extremely dark (< 10 lux) or bright (> 10,000 lux) surfaces;
 - h. Flying over surfaces that can absorb sound waves (e.g., thick carpet).
 - i. Flying over surfaces without clear patterns or texture;
 - j. Flying over surfaces with identical repeating patterns or textures (e.g. tiles with same design);
 - k. Flying over inclined surfaces that will deflect sound waves away from the aircraft
6. Camera calibration is required if the aircraft suffers from crashing.
Calibrate the front cameras if DJI GO 4 app prompt you to do so.

TapFly

CAUTION

To prevent serious injury or property damage, observe the following guidelines:

1. DO NOT instruct the aircraft to fly towards people, animals, small and fine objects (e.g. tree branches and power lines) or transparent objects (e.g. glass and water).
2. Watch out for potential obstacles in your surrounding area (especially on the rear, left, and right sides of the aircraft) and stay clear of them to avoid accidents.
3. Be prepared to take control of the aircraft or press the "STOP" button on press the "STOP" button on the screen or the Intelligent Flight Pause button at all times, in case of an emergency of an emergency.

NOTICE

1. There may be deviations between the expected and actual paths for your TapFly selection.
2. The selectable range on the screen is limited. You cannot make TapFly selections near the upper or lower edges of the screen.
3. The TapFly mode may NOT function properly when the aircraft is flying over water or snow covered area.
4. Be extra cautious when flying in extremely dark (< 300 lux) or bright (> 10,000 lux) environments.

ActiveTrack

CAUTION

To prevent serious injury and property damage, observe the following guidelines:

1. Ensure there are no people, animals, small and fine objects (e.g. tree

branches and power lines) or transparent objects (e.g. glass and water) along the desired tracking path.

2. Watch out for potential obstacles in your surrounding area (especially on the rear, left, and right sides of the aircraft) and stay clear of them to avoid accidents.
3. Be prepared to take control of the aircraft or press the "STOP" button on press the "STOP" button on the screen or the Intelligent Flight Pause button at all times, in case of an emergency of an emergency.
4. Ensure there are no obstacles behind the aircraft when it performs ActiveTrack in the reverse direction.

NOTICE

1. Be extra cautious when using ActiveTrack in any of the following situations:
 - a. The movement of the tracked subject is not on a level plane;
 - b. The tracked subject changes shape drastically while moving;
 - c. The tracked subject could be blocked or out of sight for a long time;
 - d. When the tracked object is in snow covered area;
 - e. The lighting is extremely low (< 300 lux) or high (> 10,000 lux); and
 - f. The tracked subject has a similar color or pattern as the surrounding environment.
2. You must follow local privacy laws and regulations when using ActiveTrack.

Compliance with Regulations & No Fly Zones

Regulations

⚠ WARNING

To avoid non-compliant behavior, serious injury and property damage, observe the following rules:

1. **DO NOT operate in the vicinity of manned aircraft, regardless of altitude. (Land immediately if necessary)**
2. **DO NOT fly the aircraft in densely populated areas, including cities, sporting events, exhibitions, performances, etc.**
3. **DO NOT fly the aircraft above the authorized altitude. Remain well clear of and DO NOT interfere with manned aircraft operations. Be aware of and avoid other aircraft and obstacles at all times.**

CAUTION

To avoid non-compliant behavior, serious injury and property damage, observe the following rules:

1. **DO NOT fly the aircraft near or inside no fly zones specified by local laws**

and regulations. The no fly zone list includes: airports, borders between two sovereign countries or regions, major cities/regions, etc., and is continuously updated.

2. DO NOT fly the aircraft above the authorized altitude
3. ALWAYS keep your aircraft within visual line of sight (VLOS), and use an observer to assist if needed.
4. NEVER use the aircraft to carry illegal or dangerous goods/payloads.

NOTICE

1. Make sure you understand the nature/type of your flight operation (such as for recreation, for public use, or for commercial use) and have obtained corresponding approval and clearance from the related government agencies before flight. Consult with your local regulators for comprehensive definitions and specific requirements. For users operating their aircraft in the United States, please first visit <http://www.knowbeforeyoufly.org/> and take action appropriate to your circumstances.
2. Please note that remote controlled aircraft may be banned from conducting commercial activities in certain countries and regions. Check and follow all local laws and ordinances before flying as those rules may differ from those stated here.
3. DO NOT fly around sensitive infrastructure or property such as power stations, water treatment facilities, correctional facilities, heavily traveled roadways, government facilities, military zones, etc.
4. Respect the privacy of others when using the camera. DO NOT conduct surveillance operations such as image capture or video recording on any person, entity, event, performance, exhibition, and property without authorization or where there is an expectation of privacy, even if the image or video is captured for personal use.
5. Please be advised that in certain areas, the recording of images and videos from events, performances, exhibitions, or commercial properties by means of a camera may contravene copyright or other legal rights, even if the image or video was shot for personal use.

No Fly Zones

NOTICE

DJI always stresses safety during flight, and has therefore developed various aids to help users comply with local rules and regulations while flying. We strongly recommend that you update the firmware to the latest version to ensure the following features are fully updated:

No Fly Zones

1. No Fly Zones include but are not limited to major airports around world, borders between two sovereign countries or regions, major cities/regions, etc.
2. The complete list of No Fly Zones is listed on the official DJI website at <http://flysafe.dji.com/no-fly> and is subject to periodic updates in line with the latest regulatory requirements without prior notice.
3. Some No Fly Zones are comprised of several zones. Each zone features circles of various sizes. The aircraft will NOT be able to take off in the inner most zone of the No Fly Zone, and will descend to the specified altitude when it approaches the edge of the inner most zone. Ground station functionality is disabled when the aircraft is within a No Fly Zone.
4. Users are NOT able to set up waypoints within No Fly Zones.

Altitude Limit

1. Fly NO higher than 120 meters (400 feet) above ground level and stay away from any surrounding obstacles.
2. If you intend to fly above the default altitude limit, you are required to accept the prompted disclaimer to enable the new altitude limit. If a new altitude limit is set, you further understand and agree that data including but not limited to flight telemetry data and altitude limit changes could be uploaded to and maintained on a DJI-designated server.

Compliance Information

FCC Compliance Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT NOTE: FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operate in conjunction with any other antenna or transmitter.

IC RSS Warning

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CAN ICES-3 (B)/NMB-3(B)

EU Compliance Statement

SZ DJI TECHNOLOGY CO., LTD. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53/EU.

A copy of the EU Declaration of Conformity is available online at www.dji.com/euro-compliance

EU contact address: DJI GmbH, Industriestrasse. 12, 97618, Niederlauer, Germany

Declaración de cumplimiento UE

SZ DJI TECHNOLOGY CO., LTD. por la presente declara que este dispositivo cumple los requisitos básicos y el resto de provisiones relevantes de la Directiva 2014/53/EU.

Hay disponible online una copia de la Declaración de conformidad UE en www.dji.com/euro-compliance

Dirección de contacto de la UE: DJI GmbH, Industriestrasse. 12, 97618, Niederlauer, Germany

EU-verklaring van overeenstemming

SZ DJI TECHNOLOGY CO., LTD. verklaart hierbij dat dit apparaat voldoet aan de essentiële vereisten en andere relevante bepalingen van Richtlijn 2014/53/EU.

De EU-verklaring van overeenstemming is online beschikbaar op www.dji.com/euro-compliance

Contactadres EU: DJI GmbH, Industriestrasse. 12, 97618, Niederlauer, Germany

Declaração de conformidade da UE

A SZ DJI TECHNOLOGY CO., LTD. declara, através deste documento, que este dispositivo está em conformidade com os requisitos essenciais e outras disposições relevantes da Diretiva 2014/53/EU.

Existe uma cópia da Declaração de conformidade da UE disponível online em www.dji.com/euro-compliance

Endereço de contacto na UE: DJI GmbH, Industriestrasse. 12, 97618, Niederlauer, Germany

Dichiarazione di conformità UE

SZ DJI TECHNOLOGY CO., LTD. dichiara che il presente dispositivo è conforme ai requisiti essenziali e alle altre disposizioni rilevanti della direttiva 2014/53/EU.

Una copia della dichiarazione di conformità UE è disponibile online all'indirizzo Web www.dji.com/euro-compliance

Indirizzo di contatto UE: DJI GmbH, Industriestrasse. 12, 97618, Niederlauer, Germany

Déclaration de conformité UE

Par la présente, SZ DJI TECHNOLOGY CO., LTD déclare que cet appareil est conforme aux principales exigences et autres clauses pertinentes de la directive européenne 2014/53/EU.

Une copie de la déclaration de conformité UE est disponible sur le site www.dji.com/euro-compliance

Adresse de contact pour l'UE : DJI GmbH, Industriestrasse. 12, 97618, Niederlauer, Germany

EU-Compliance

Hiermit erklärt SZ DJI TECHNOLOGY CO., LTD., dass dieses Gerät den wesentlichen Anforderungen und anderen einschlägigen Bestimmungen der EU-Richtlinie 2014/53/EU entspricht.

Eine Kopie der EU-Konformitätserklärung finden Sie online auf www.dji.com/euro-compliance.

Kontaktadresse innerhalb der EU: DJI GmbH, Industriestrasse. 12, 97618, Niederlauer, Germany



CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

Environmentally friendly disposal



Old electrical appliance must not be disposed of together with the residual waste, but have to be deposited separately. The disposal at the communal collection point via private person is for free. The owner of old appliance is responsible to bring the appliances to these collecting point or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.

- (1) 이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.
- (2) 당해 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없음.

根據 NCC 低功率電波輻射性電機管理辦法規定：

- (1) 第十二條經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
- (2) 第十四條低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

เครื่องโทรคมนาคมและ อุปกรณ์นี้ มีความสอดคล้องตามข้อกำหนดของ กทช.

“La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.”

Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário.

This content is subject to change.

**Download the latest version from
www.dji.com/support**

If you have any questions about this document, please contact DJI
by sending a message to **DocSupport@dji.com**.

MAVIC is a trademark of DJI.

Copyright © 2017 DJI All Rights Reserved.

Printed in China.